


Assembly Codes EL-O-Matic F-Series actuators

Spring-return actuators


Assembly code: CW

= Standard, Clockwise-to-Close rotation
= Fail-to-Close

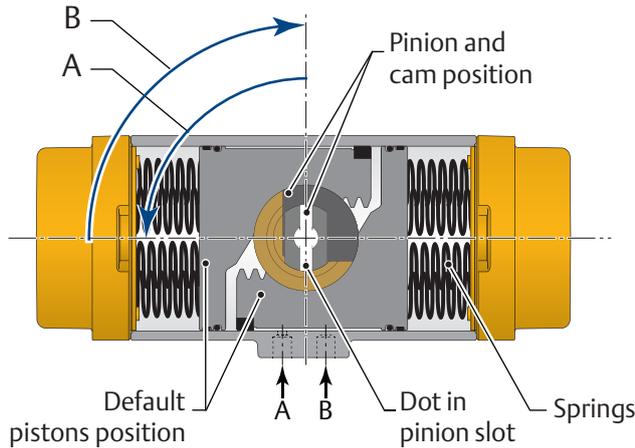

Assembly code: CC

= Reverse, Counterclockwise-to-Open
= Fail-to-Open

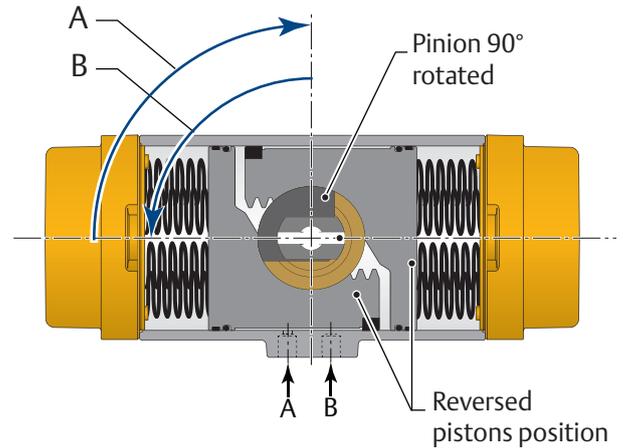


A = Central air chamber pressurized
B = Spring stroke

Double-acting actuators


Assembly code: CW

= Standard, Clockwise-to-Close rotation

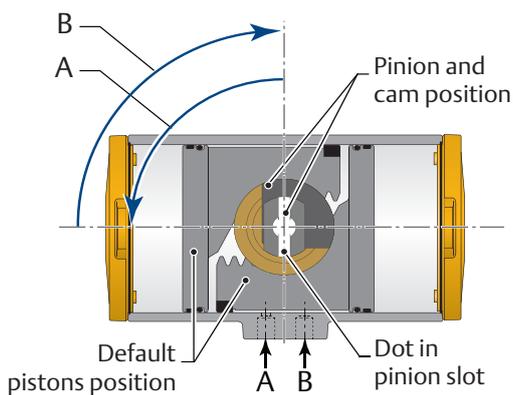

Assembly code: CC

= Reverse, Counterclockwise-to-Open

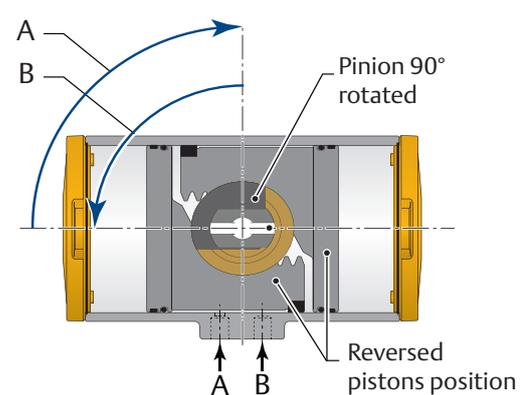

A = Central air chamber pressurized
B = End cap air chambers pressurized

All views are from above. Pistons are shown in inward position.