



ANDERSON GREENWOOD SERIES 81 SPRING OPERATED PRESSURE RELIEF VALVES

INSTALLATION AND MAINTENANCE INSTRUCTIONS

Before installation these instructions must be fully read and understood



Operational Safety Instructions (available at Emerson.com/FinalControl) should be fully read and understood before returning this product to service after maintenance.

2 VALVE REPAIR (-4, -6, -8 ORIFICE)

Refer to Figure 1

2.1 Disassembly

- 2.1.1 Relieve spring tension and back blowdown adjusting screw out two turns.
- 2.1.2 Remove inlet bushing, bushing seal and valve internals.
- 2.1.3 Separate nozzle from guide by hitting top of spindle on soft surface.

2.2 Repair

- 2.2.1 Hold spindle by skirt O.D. in soft jaw vise and replace seat.
- 2.2.2 Examine nozzle and polish out any scratches or nicks. Replace if necessary.
- 2.2.3 To obtain better seat seal with PTFE at low set pressures, burnish seat against nozzle by chucking spindle in lathe and holding nozzle against spindle. Burnish with small force and for short time as PTFE readily deforms.

2.3 Assembly

Assemble in reverse order of disassembly. Do not lubricate spindle or guide. Make sure the nozzle is fully and evenly seated in guide. This is a press fit joint. Lubricate threads and pressure adjustment screw tip.

2.4 Soft goods repair kit

The part numbers for soft goods repair kits are listed below. Each kit contains the seat and all seals for the pressure ranges indicated.

TABLE OF CONTENTS

1. General.....	1
2. Valve repair (-4, -6, -8 orifice).....	1
3. Valve repair (F, G, H and J orifice).....	2
4. Valve adjustment.....	3
5. Seat leakage.....	4
6. Set pressure change.....	4

Installation and Maintenance Instructions for Series 81 Spring Operated Pressure Relief Valves (SOPRV).

The intent of these instructions is to acquaint the user with the storage, installation and operation of this product. Please read these instructions carefully before installation.

1 GENERAL

The Anderson Greenwood Series 81 Relief Valve is a direct acting spring loaded valve for gas service and uses a plastic seat and O-ring seals. The intent of these instructions is to acquaint the user with the maintenance of this product. Please read these instructions carefully. This product should only be used in accordance with the applicable operating instructions and within the application specifications of the original purchase order. The Installation and

ANDERSON GREENWOOD SERIES 81 SPRING OPERATED PRESSURE RELIEF VALVES

INSTALLATION AND MAINTENANCE INSTRUCTIONS

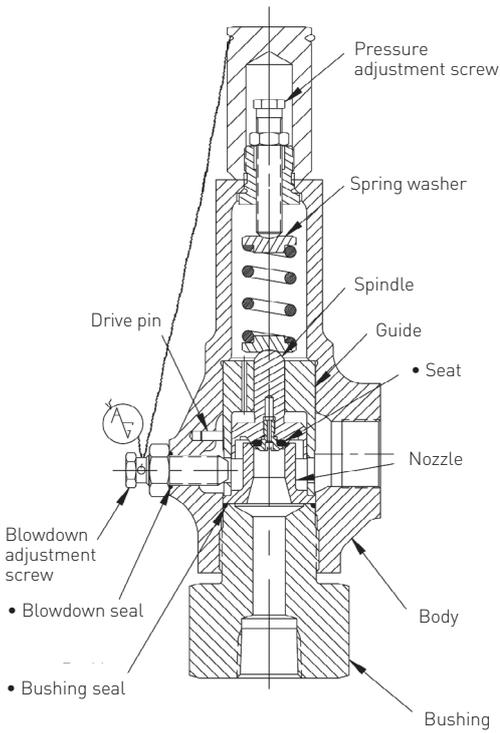


FIGURE 1
Series 81 (-4, -6, -8 Orifices)
• Parts contained in kit

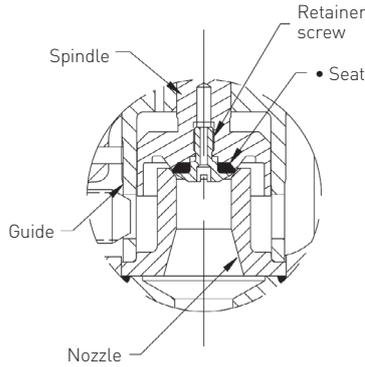


FIGURE 2
Series 81 (F, G, H and J Orifices)

3 VALVE REPAIR (F, G, H AND J ORIFICE)

Refer to Figure 2

3.1 Disassembly

- 3.1.1 Relieve spring tension and back blowdown screw out two turns.
- 3.1.2 Remove spring bonnet and valve internals.
Note: a pipe nipple can be attached to vent holes in top of guide to facilitate removal. (1/8"-NPT: F, G or 1/4"-NPT: H, J)
- 3.1.3 Separate nozzle from guide by hitting top of spindle on soft surface.

3.2 Repair



- 3.2.1 Hold spindle by skirt O.D. in soft jaw vise and replace seat.
- 3.2.2 Examine nozzle and polish seating surface as required. Replace if necessary.

3.3 Assembly

Assemble in reverse order of disassembly. Do not lubricate spindle or guide. Make sure the guide plugs, if used, are flush or below the top guide surface. Refer to table for plug requirements. Make sure nozzle is fully and evenly seated in guide. This is a press fit joint. Lubricate threads and pressure adjustment screw tip.

Orifice	TFE/KEL-F	Set pressure range		Vespel	Set pressure range	
		psig	kpag		psig	kpag
-4	04.4805.001	20-4000	138-27579	04.4805.002	4001 and up	27586 and up
-6	04.4805.003	20-1500	138-10342	04.4805.004	1501 and up	10349 and up
-8	04.4805.005	20-1500	138-10342	04.4805.006	1501 and up	10349 and up

Orifice	Set pressure (psig)	Quantity
F	Above 354	2
G	Above 223	2
H	Above 227	3
J	Above 142	3

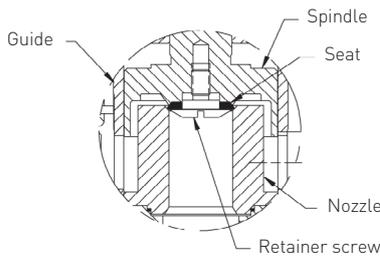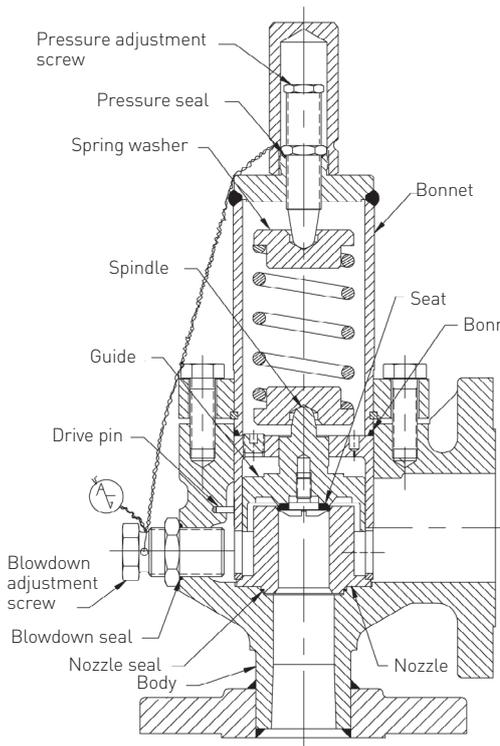

ANDERSON GREENWOOD SERIES 81 SPRING OPERATED PRESSURE RELIEF VALVES

INSTALLATION AND MAINTENANCE INSTRUCTIONS

3.4 Soft goods repair kit


The part numbers for soft goods repair kits are listed below. Each kit contains the seat and seals for all pressure ranges indicated.

Orifice	TFE/KEL-F	Set pressure range		Vespel	Set pressure range	
		psig	kpag		psig	kpag
F	04.4805.007	20-750	138-5171	04.4805.008	≥ 751	≥ 5178
G	04.4805.009	20-750	138-5171	04.4805.010	≥ 751	≥ 5178
H	04.4805.011	20-750	138-5171	04.4805.012	≥ 751	≥ 5178
J	04.4805.013	20-750	138-5171	04.4805.014	≥ 751	≥ 5178

SET PRESSURE RANGE

psig	kpag	Valve operating characteristic	Tolerance*
Above 70	Above 483	Set pressure	±3%
70 and below	483 and below	Set pressure	±2 psi (±13.8 kpa)
100 and above	689 and above	Cracking pressure	95%
50 to 99	345 to 683	Cracking pressure	90 %
Below 50	Below 345	Cracking pressure	85%
100 and above	689 and above	Reseat pressure	93%
50 to 99	345 to 683	Reseat pressure	90%
Below 50	Below 345	Reseat pressure	80%

* Percent tolerance is of specified set pressure

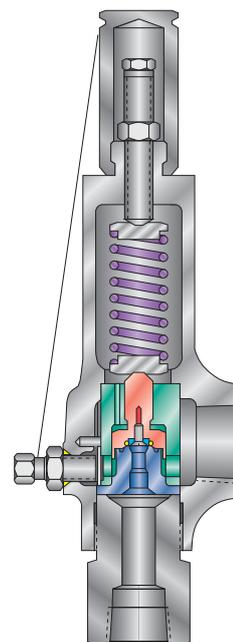

4 VALVE ADJUSTMENT

4.1 General

Two adjustments are provided on gas service valves, one for adjusting the opening pressure and one for adjusting the closing pressure.

4.2 Set pressure

Turn spring adjustment screw on bonnet in most of the way. Increase pressure to desired level and back out screw until valve pops. Lock screw with jam nut and retest. Readjust as required.

4.3 Reseat pressure

To adjust blowdown, turn blowdown adjustment screw IN to shorten blowdown; OUT to increase blowdown.

Note: if volume of test set up is too small, blowdown will be set too short even though pressure gauge indicates it to be correct. Refer to Section 4.5.

4.4 Adjustments tolerances

Two adjustments are provided on gas service valves, one for adjusting the opening pressure and one for adjusting the closing pressure.

4.5 Adjusting equipment

Where practical, valves should be set using an accumulator large enough to accurately read and set blowdown. For a -4 orifice up to 4000 psig (27579 kpag), -6 orifice up to 1410 psig (9722 kpag) and a -8 orifice up to 600 psig (4137 kpag), a four cubic foot (0.113 m³) accumulator is recommended. The supply pipe to the valve should be the same size as the inlet or larger and not more than 10" (254 mm) long. For all other valves, or if an accumulator is not available for the sizes listed above, the blowdown may be set using the following method.

Turn the blowdown adjusting bolt all the way in until it just touches the guide, then turn it out the number of turns listed in the table.

ANDERSON GREENWOOD SERIES 81 SPRING OPERATED PRESSURE RELIEF VALVES

INSTALLATION AND MAINTENANCE INSTRUCTIONS

BLOWDOWN ADJUSTMENT

Orifice	Turns out of blowdown screw	Set pressure range	
		psig	kpag
-4	1	20-4000	138-27579
	1½	> 4000	> 27579
-6	¾	20-1410	138-9722
	1¼	> 1410	> 9722
-8	1½	20-600	138-4137
	2½	> 600	> 4137
-F	1	20-700	138-4826
	1½	> 700	> 4826
-G	1¾	20-700	138-4826
	2¼	> 700	> 4826
-H, -J	¾	20-700	138-4826
	1½	> 700	> 4826

5 SEAT LEAKAGE

5.1 General

If the valve leaks after repair check the following:

- 5.1.1 Full and even seating of nozzle and guide.
- 5.1.2 Foreign particles trapped between the seat and nozzle. If any are found they may have damaged the seat, making it necessary to replace it.
- 5.1.3 Correct seat material for the valve set pressure. If items 1 and 2 reveal no evident seat leakage source, the procedures described in Section 5.2 may be used to eliminate seat leakage. Section 5.2 applies only to teflon seated -4, -6, or -8 orifice Series 81's with nameplate set pressures that do not exceed 300 psig (2068 kpag).

5.2 Seat sealing procedures

Heat the valve for 15 to 30 minutes in a oven preheated to 250-300°F (121-149°C). A concentrated heat source such as a heat gun or open flame must not be used. After the valve has air-cooled to room temperature, retest per Section 4.0 to insure seat tightness. If results have not improved, the valve should be disassembled and the seat replaced.

6 SET PRESSURE CHANGE

If the set pressure is changed more than ±5% from the nameplate set pressure, the spring, spring washers, spring bonnet, guide plugs and seat may also have to be changed. Consult the factory or refer to the soft goods repair kit, the table in Section 3.3 and spring chart 03.0079.

Neither Emerson, Emerson Automation Solutions, nor any of their affiliated entities assumes responsibility for the selection, use or maintenance of any product. Responsibility for proper selection, use, and maintenance of any product remains solely with the purchaser and end user.

Anderson Greenwood is a mark owned by one of the companies in the Emerson Automation Solutions business unit of Emerson Electric Co. Emerson Automation Solutions, Emerson and the Emerson logo are trademarks and service marks of Emerson Electric Co. All other marks are the property of their respective owners.

The contents of this publication are presented for informational purposes only, and while every effort has been made to ensure their accuracy, they are not to be construed as warranties or guarantees, express or implied, regarding the products or services described herein or their use or applicability. All sales are governed by our terms and conditions, which are available upon request. We reserve the right to modify or improve the designs or specifications of such products at any time without notice.

Emerson.com/FinalControl